

LED Definition

HOSE #1

ED2	BANK 1 (80)
ED3	BANK 2 (82)
ED4	BANK 3 (83)
ED5	RESET COMPLETE (8)
ED28	AUTHORIZE INPUT (14)
ED26	OVER PSI SWITCH
ED22	STOP BOTTON
ED23	START BOTTON
ED20	PULSE INPUT
ED19	PULSE OUTPUT

HOSE #2

ED6	BANK 1 (80)
ED7	BANK 2 (82)
ED8	BANK 3 (83)
ED9	RESET COMPLETE (8)
ED29	AUTHORIZE INPUT (14)
ED27	OVER PSI SWITCH
ED24	STOP BOTTON
ED25	START BOTTON
ED21	PULSE INPUT
ED18	PULSE OUTPUT

ED's that must be on before it will go to RESET COMPLETE (8s then 0s)

HOSE #1 IS ED28, ED26 and ED22

HOSE #2 IS ED29, ED27 and ED24

