

STANDARD DISPENSERS

END / ERROR CODES FOR DISPENSER PROGRAMS

1 = NO START FLOW

2 = EXCESS FLOW

3 = MINIMUM FLOW

4 = NORMAL

5 = STOP SWITCH

6 = AUTH. REMOVED

7 = PRESSURE SWITCH

8 = OVER PRESSURE

9 = POWER FAIL

10 = PRESSURE TRANSDUCER FAILURE

11 = EXCESS VOLUME DISPENSED

12 = START SWITCH NEVER PUSHED

13 = DEFECTIVE TEMPERATURE SENSOR

66 = CONFIGURATION SWITCH IN WRONG POSITION