

# LED Definition

## HOSE #1

ED2	BANK 1 (80)
ED3	BANK 2 (82)
ED4	BANK 3 (83)
ED5	RESET COMPLETE (8)
ED28	AUTHRIZE INPUT (14)
ED26	OVER PSI SWITCH
ED22	STOP BOTTON
ED23	START BOTTON
ED20	PULSE INPUT
ED19	PULSA OUTPUT

## HOSE #2

ED6	BANK 1 (80)
ED7	BANK 2 (82)
ED8	BANK 3 (83)
ED9	RESET COMPLETE (8)
ED29	AUTHRIZE INPUT (14)
ED27	OVER PSI SWITCH
ED24	STOP BOTTON
ED25	START BOTTON
ED21	PULSE INPUT
ED18	PULSE OUTPUT

**ED's that must be on before it will go to RESET COMPLETE (8s then 0s)**

**HOSE #1 IS ED28, ED26 and ED22**

**HOSE #2 IS ED29, ED27 and ED24**

