




FRONT

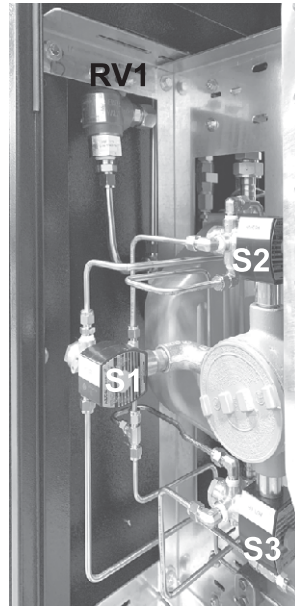


FRONT LEFT

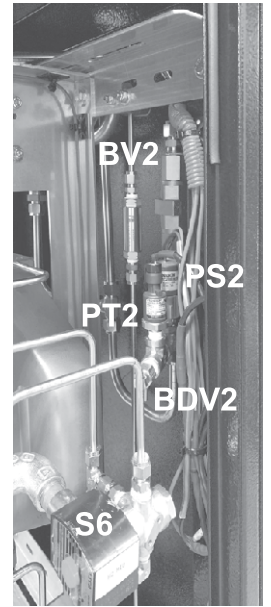


FRONT RIGHT

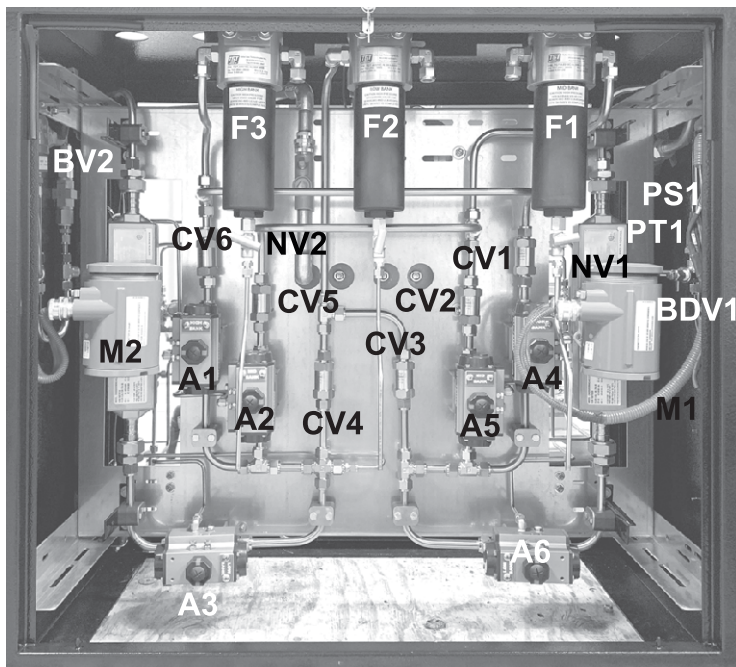

BACK

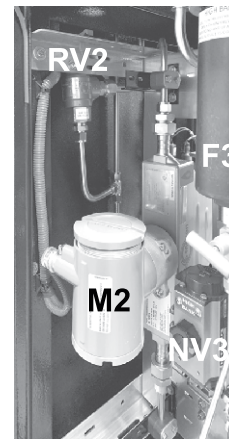

BACK LEFT

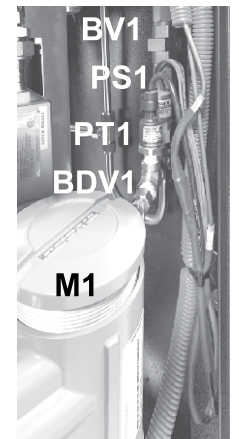

BACK RIGHT



UPPER CABINET

- A1-A6..... BI-TORQ ACTUATOR PN52SR AND OASIS BALL VALVE, BV704
- BV1,BV2... PARKER BALL VALVE, 8FB8J2-SSP
- BDV1,2..... PARKER BLEED VALVE, PFG-4M-BV-4SSG
- CIB..... TGT CUSTOMER INTERFACE BOARD (INSIDE BOX)
- CV1-6..... PARKER CHECK VALVE, 81-C8L-1-SS
- PS1,2..... PRESSURE SWITCH , NASON CD-1C-4500R/WL293
- PT1,2..... ASHCROFT PRESSURE TRANSMITTER, G27M02RMG25000#G

- R1..... REGULATOR, BELGAS P39
- RV1,2..... RELIEF VALVE, MERCER, 14-22B7112JX1
- M1,2..... METER, MICRO MOTION CNG50 MM-290NCAAEZZZ - SENSOR MM2700 / 13ABA3ZZZ - TRANSMITTER
- F1,2..... FILTER TGT-A-8519C-N.3MA-BS6
- NV1,2..... NEEDLE VALVE, NOSHOK T50
- PG1..... PRESSURE GAUGE 5000 PSI, WIKA 2.5" 427123
- S1-6..... ASCO RED HAT SOLENOID VALVE
- VS1..... VIBRATION SWITCH, MURPHY VS2EX




NZ1

3WV


PSIG




BB

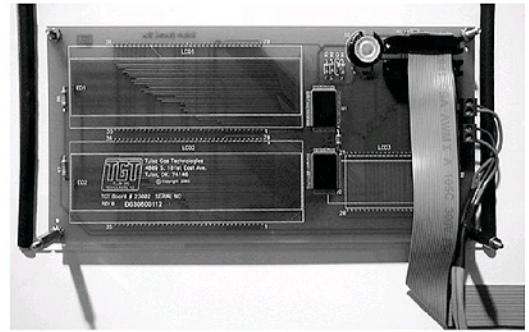

DB

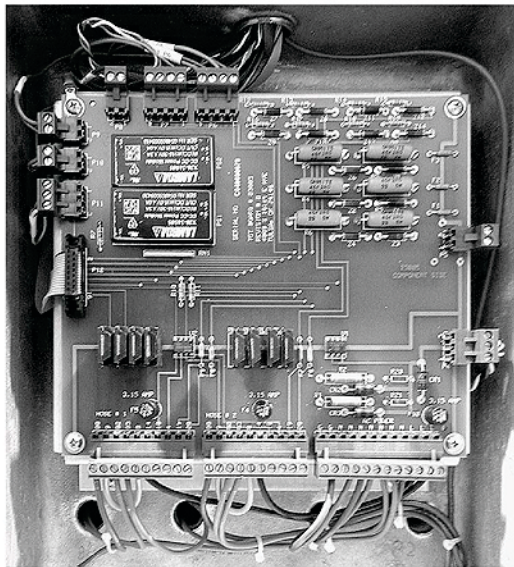


CIB

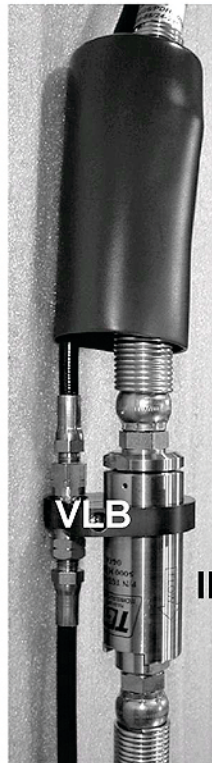


VLB

ILB

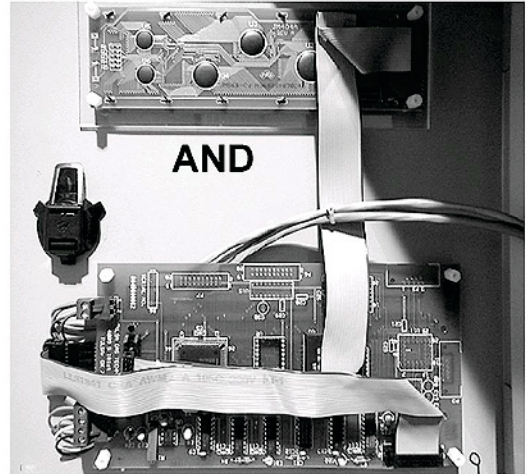

AND

MMI

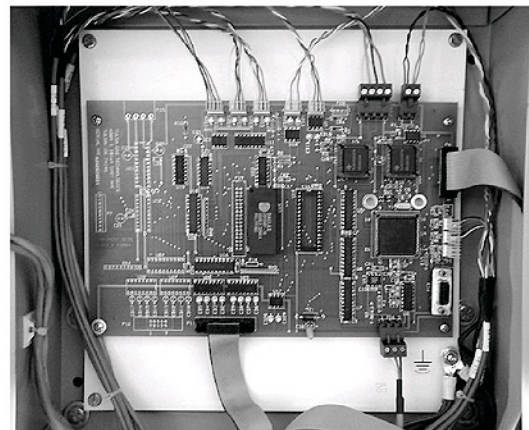

MB

- AND....ALPHA-NUMERIC DISPLAY,
4 LINE X 40 CHAR., DCI404AF3BW6
- BB....TGT BREAKAWAY BASE
- CIB....CUSTOMER INTERFACE BOARD,
TGT 23005
- DB....DISPLAY BOARD, 23002
- ILB....TGT-6ILB IN-LINE BREAKAWAY
- MMI....MAN-MACHINE INTERFACE BOARD,
TGT 23007
- MB....MAIN BOARD, TGT 23004
- NZ1....STAUBLI NOZZLE, N2, P36
- NZ2....OPW CC6000 NOZZLE
- PSIG...WIKA 0-6000 PRESSURE GAUGE, SS,
8992945-0012
- VLB....TGT VENT-LINE BREAKAWAY
- 3WV....PARKER 3-WAY VALVE, 4F-HB4XPKR-SSP