




FRONT

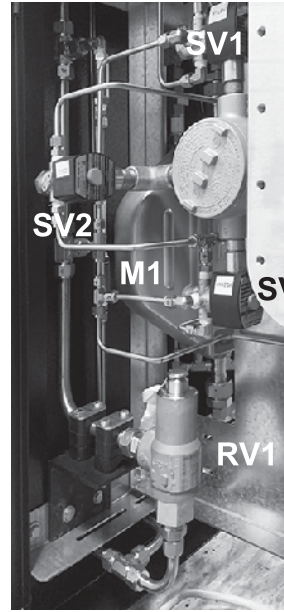


FRONT LEFT

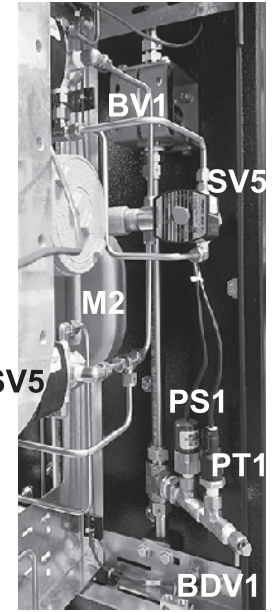


FRONT RIGHT

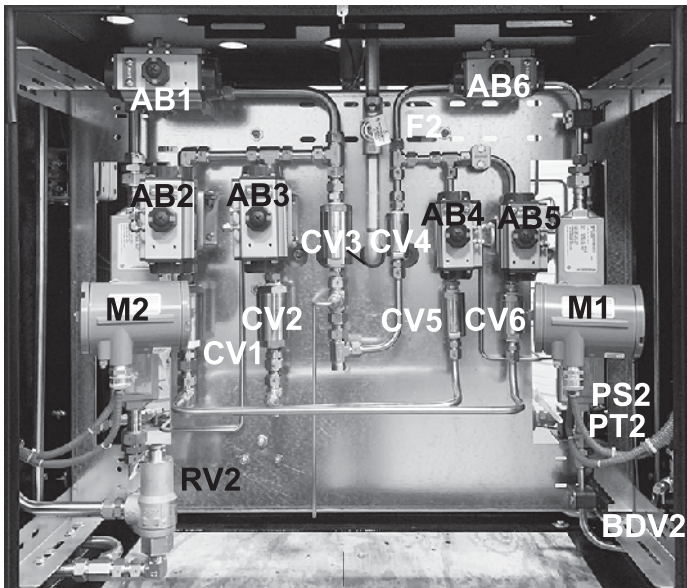

BACK

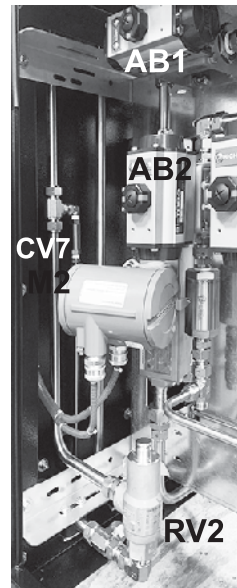

BACK LEFT

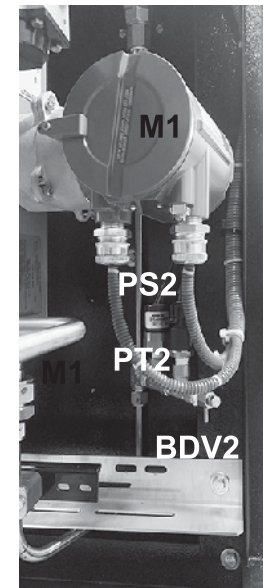

BACK RIGHT

BV1.....OASIS BALL VALVE, BV706  
 BV2.....PARKER BALL VALVE, 8FB8LJ2-SSP  
 BDV1,2...PARKER BLEED VALVE,  
 PFG-4M-BV-4SSG  
 CIB.....TGT CUSTOMER INTERFACE BOARD  
 (INSIDE BOX)  
 PS1,2....PRESSURE SENSOR, NASON  
 CD-1C-4500R/WL293  
 PT1,2....ASHCROFT PRESSURE TRANSMITTER,  
 G27M02RMG25000#G  
 CV1,2,3..OASIS CHECK VALVE, CV306-6NXDP  
 CV4,5,6..OASIS CHECK VALVE, CV304-6NXDN  
 CV7,8....OASIS CHECK VALVE CV102-3NBSO

RV1,2....RELIEF VALVE, MERCER SERIES 1400  
 M1,2.....MICRO MOTION CNG50 METER,  
 MM-290NCAAEEZZZ-SENSOR,  
 MM2700/13ABA3ZZZ-TRANSMITTER  
 A1,2,3...3/4" BI-TORQ ACTUATOR WITH  
 OASIS BALL VALVE, BV706  
 A4,5,6...1/2" BI-TORQ ACTUATOR WITH  
 OASIS BALL VALVE, BV704  
 SV1-6....ASCO SOLENOID VALVE,  
 SERIES 8003G/H  
 R1.....REGULATOR, BELGAS P39  
 PG1.....NO-SHOK 0-200 PSI PRESSURE GAUGE



NZ1



NZ2




ILB




BB




PSIG

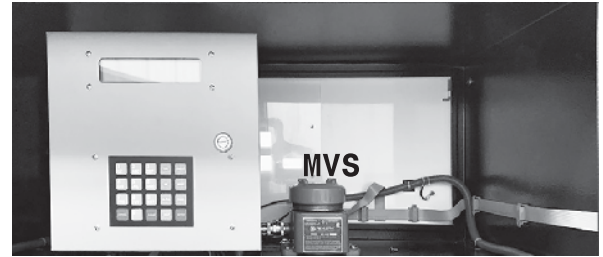


UPPER CABINET

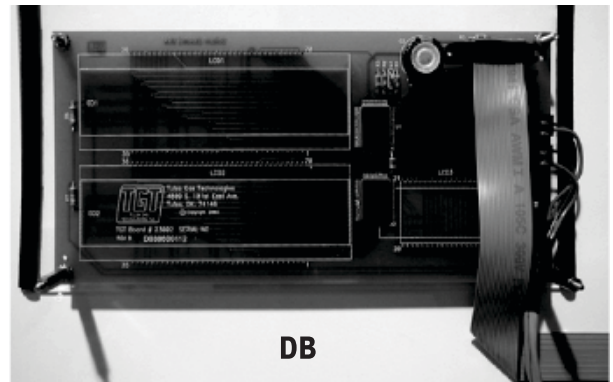


DB

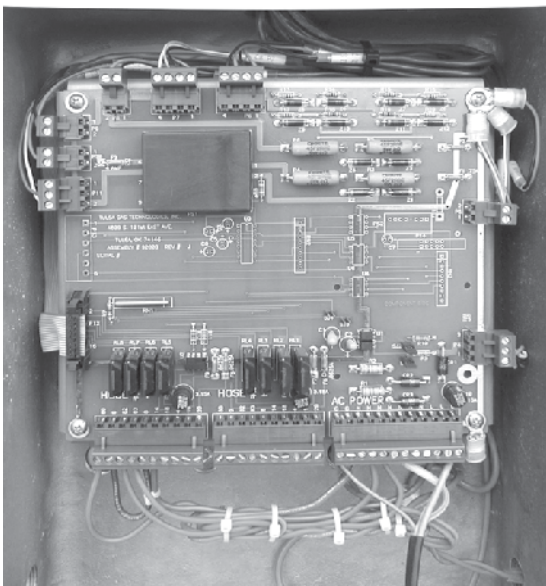

CIB

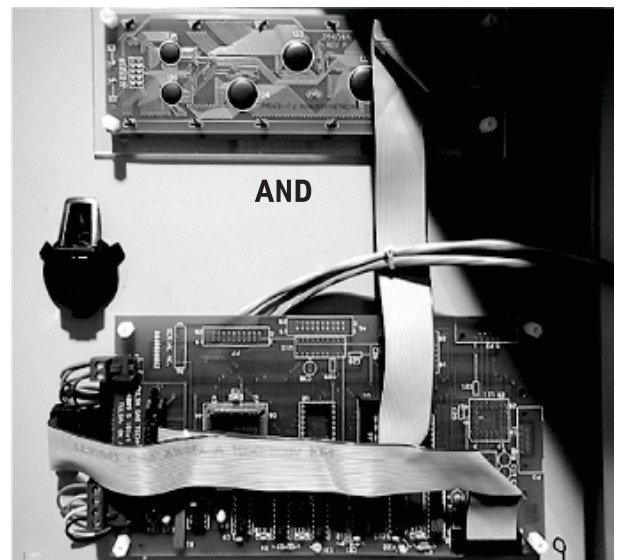

MMI

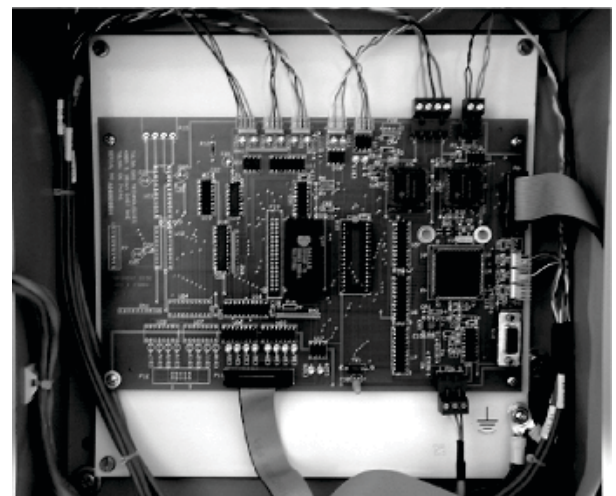

MB

- AND....ALPHA-NUMERIC DISPLAY,  
4 LINE x 40 CHAR., DCI404AF3BW6
- BB....TGT BREAKAWAY BASE
- CIB....TGT CUSTOMER INTERFACE BOARD
- DB....TGT DISPLAY BOARD
- ILB....OPW ILB-5 INLINE BREAKAWAY
- MMI....TGT MAN-MACHINE INTERFACE BOARD
- MB....TGT MAIN BOARD
- MVS....MURPHY VS2EX VIBRATION SWITCH
- NZ1....OPW CT5000
- NZ2....OPW CT1000
- PSIG...WIKA 0-6000 PRESSURE GAUGE, SS,  
8992945-0012
- VLB....TGT VENT-LINE BREAKAWAY
- 3WV....PARKER 3-WAY VALVE, 4F-HB4XPKER-SSP